

FreeCAD

Exporting STL

Best way is to use *Mesh* workbench and *Create mesh from shape...* . Once mesh is rendered it can be exported via *File -> Export...* and selecting STL.

Revision #1

Created 2025-08-27 20:33:20 IST by hxd

Updated 2025-08-27 20:35:19 IST by hxd